

TREDIT™

TIRE & WHEEL

Torque Specifications

Size	Bolt Pattern	Offset	Steel Wheels Recommended Torque (ftlbs)	Aluminum Wheels Recommended Torque (ftlbs)
12"	4-4" or 5-4.5"	0"	50-75	95-105
13"	4-4" or 5-4.5"	0"	50-75	95-105
14"	5-4.5"	0"	90-120	110-120
15"	5-4.5"	0"	90-120	110-120
15"	6-5.5"	0"	100-120	110-120
16" (1/2" Stud)	6-5.5" or 8-6.5"	0"	100-120	110-120
16" (9/16" Stud)	8-6.5"	0"	110-120	125-130
17.5" (9/16" Stud)	8-6.5"	0"	125-130	125-130
17.5" (5/8" Stud)	8-6.5"	0"	275-325 (Flange Nut)	150

*Always verify installation recommendations, procedures, and tolerance with all other running gear component(s).

Using a properly calibrated torque wrench, all the lug nuts installed with any new tire/wheel assembly, must have their torque values checked after the first 10, 25, and 50 miles *(and periodically checked during normal use thereafter)*. This process should be repeated any time the lug nuts are removed from the wheel.

Lug Nut Installation Sequence(s)

